


10.

LOCATION OF COMPONENTS IN ENGINE BAY

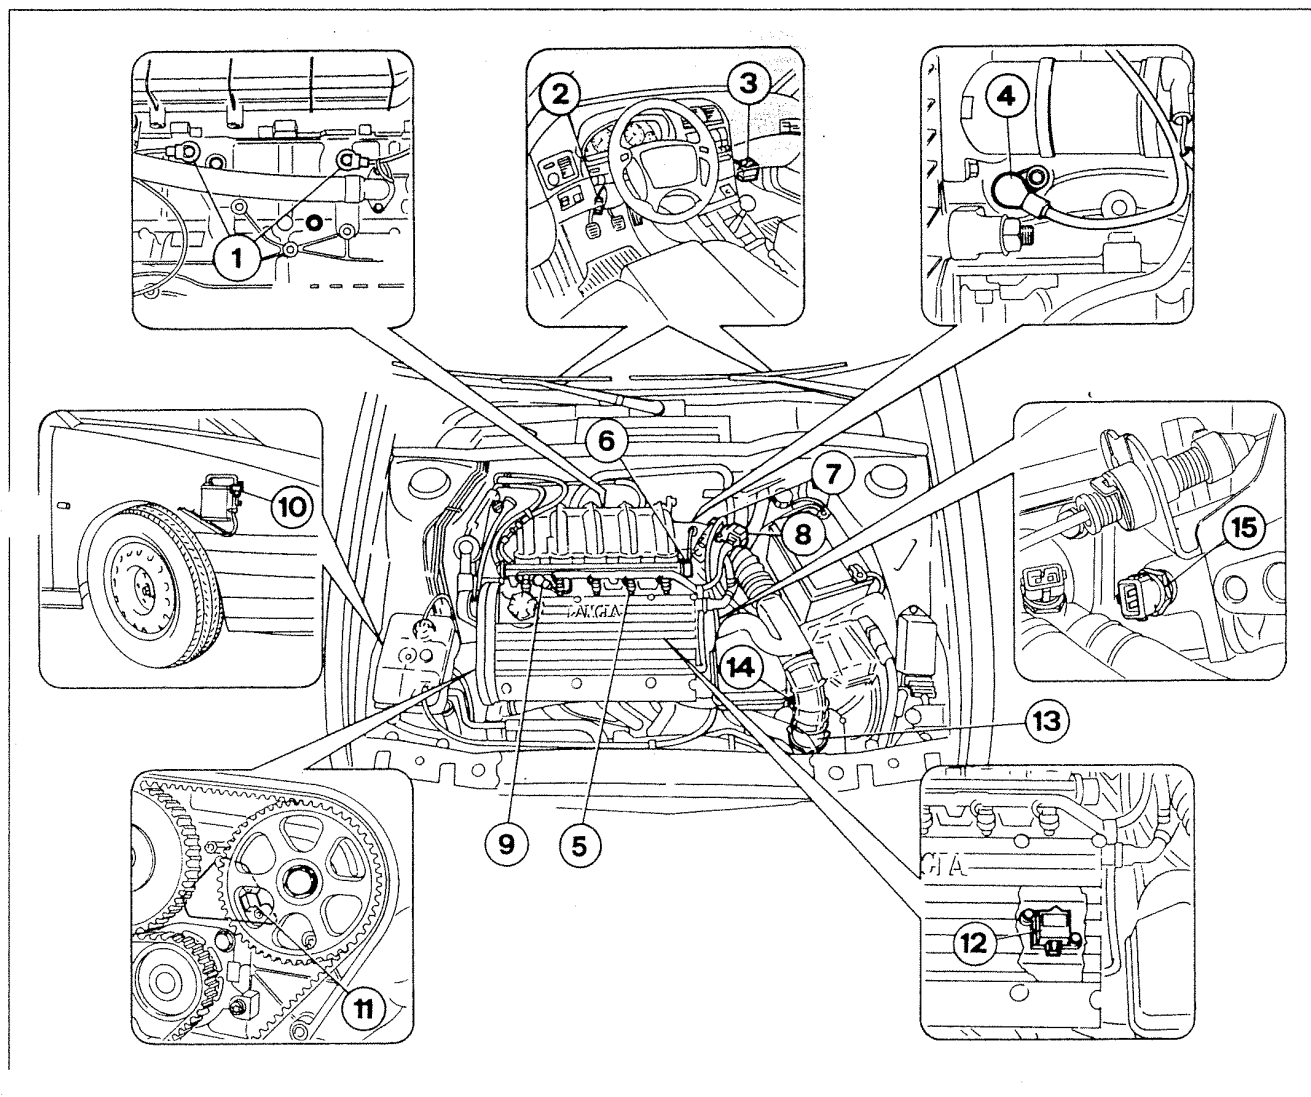

P3U22CX01

Key:

- | | |
|-------------------------------|-------------------------------------|
| 1. Knock sensors | 9. Timing variator control solenoid |
| 2. Diagnostic socket | 10. Fuel vapour solenoid |
| 3. Injection-ignition ECU | 11. Timing sensor |
| 4. Rpm and TDC sensor | 12. Single coils |
| 5. Injectors | 13. Air flow meter (debimeter) |
| 6. Fuel pressure regulator | 14. Intake air temperature sensor |
| 7. Throttle position sensor | 15. Coolant temperature sensor |
| 8. Engine idle speed actuator | |