

## REMOTE CONTROL

Voltage:12V

Current:0mA

Battery:27A/12V

Frequency:300MHz~433.92MHz

Coding:Learning Code

Code Times:>million

## Operation Manual

### Function Operational Specification

#### 1.Set(Every time effectively)

Press set button, lock door,Turning light flash once,siren sound one time,door lock>window output,LED flashes.

#### 2.Unset(Every time effectively)

Press unset button once, turning light flash twice,siren sound twice,door unlock.

#### 3.Trunk release(The car must have trunk motor)

In any state,press mute button 3 seconds,trunk release automatically,turning light flash three times.

In any state,press mute button 3 seconds,trunk release automatically.

In any state,press mute button +ca find button 3 seconds,trunk release automatically.

#### 4.Vehicle locator

Press car locator button once, turning light flash three times.

#### 5.ACC/ON Lock,ACC/OFF Unlock

ACC remote control arm,only switch lock can disarm.

#### 6.learning code

Long press learning button 3 seconds,turning light flashes for a long time, enter learning code state,in 10 seconds, press any button, turning light flash once,if learn one more,press any button, turning light flash twice.And By This Analogy,four remote control can learning at the same time.

Note:Turning light output time is 0.1 second,unlock/lock pneumatic is 3 second,Electric 0.5 sec,trunk 0.5sec>window output 30sec,LED 0.5 sec,siren 0.1sec.

## Specification of Electronic

### Main Unit

Output current:signal light:5A\*2,siren 10A,central lock 10A

Coding:Learning code

Voltage:12±2V

Static Current:<15mA(except indicator,sensor)

Indicator Current:20mA intermittently

Shock sensor Current:<1mA

Frequency:□315MHz □433.92MHz

